



HORTUS[®]
outdoor wood flooring

DECKING LEVEL 1200

(finished product with grid base): 1200 x 95 x 54 mm
(adjustable support with self-leveling head not included)

LINEAR pattern

Hortus Decking
Level 1200
LINEAR pattern

Surface covered:
1 m² approx.



INSTALLATION

(linear pattern)



1 Place the adjustable supports in vertical rows leaving 60 cm between beams and 60 cm between supports in the direction of the beam.



2 Adjust the height of the self-leveling head to compensate for differences in level. Insert the fir beam inside the joints on top of the self-leveling heads.



3 Click the grid bases into the fir beam, make sure that the large tongues on the grid bases face up.



4 Insert the female joint of the plank you are laying into the male joint of the plank you have already laid. Make sure that the ends of the two planks reach the middle of the grid base under them.



5 After inserting the heads of the two consecutive planks, push the two planks down hard to click them into the grid base.



6 Make sure that the plank has also clicked into the grid base installed on the next beam.



7 Use a screw to secure the last row of grid bases before the reducer strips to prevent the planks from slipping out during use.



8 Make sure that you have correctly laid the plank at a 45° angle on the long side from the part of the floor that you have already laid and with the end matching the end of the previous plank.

N.B. Near to the borders of the flooring glue or screw the heads of the staves with the grids below in order to avoid the sliding of the staves outwards.